

ACCESSORIES FOR PLEATED BLINDS



SIMPLY STICK ■ SIMPLY CLAMP



glue plate
for pleated blind system **EOS**®

page 4



glue plate
for pleated blind system **Cosiflor**®

page 6



glue plate
for pleated blind system **Decomatic**®

page 8




universal glue plate
for pleated blinds

page 10



adhesive bracket
for pleated blinds

page 12

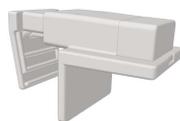

clamp bracket
for pleated and venetian blinds

page 14



glider
for venetian and pleated blinds

page 17


glue plate for
system **EOS®**
(max. size of the pleated blind 2m²)



| article | article-no. description | | dispatch unit |
|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------|--|------------------------------------------------------------------|
|  | 564 glue plate for pleated blind system EOS® self-adhesive transparent | | 4 pieces in a bag - 100 pieces (25 bags) in a box |
|  | SBB 564 glue plate for pleated blind system EOS® self-adhesive transparent • 4 pieces self-service packed (blister) • | | 4 pieces in a blister - 10 blisterpacks in a box |
|  | 561 KLE adhesive film for glue plates | | 100 pieces |
|  | 539 cleaning tissue | | 5 pieces in a bag - 100 pieces in a box |


glue plate for system EOS®

(max. size of the pleated blind 2m²)

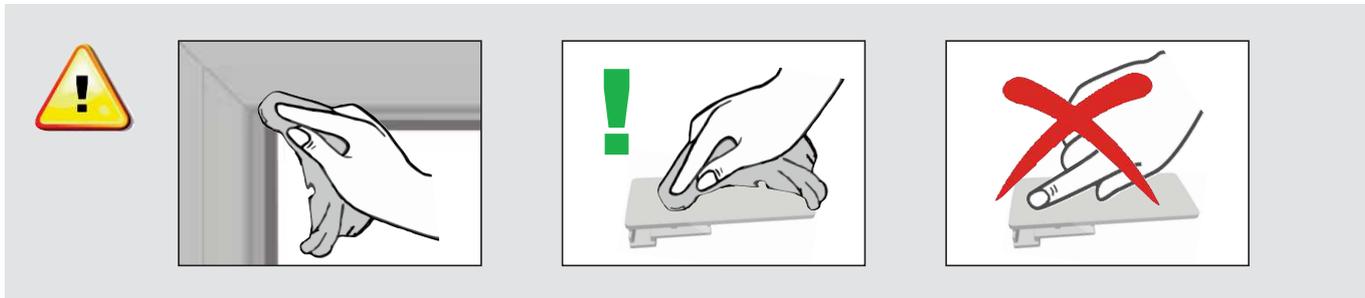


Glue plates for pleated blinds are usable for plastic and aluminium window frames which are not special coated, veined, uneven or rough (depth of the window bar at least 13 mm). When using the glue plates please

make sure that the surfaces are dry and clean. They have to be free from e.g. grease, oil or silicone films, as well as dirt particles! (After using solvents the purified surfaces have to dry for at least 2 hours.)

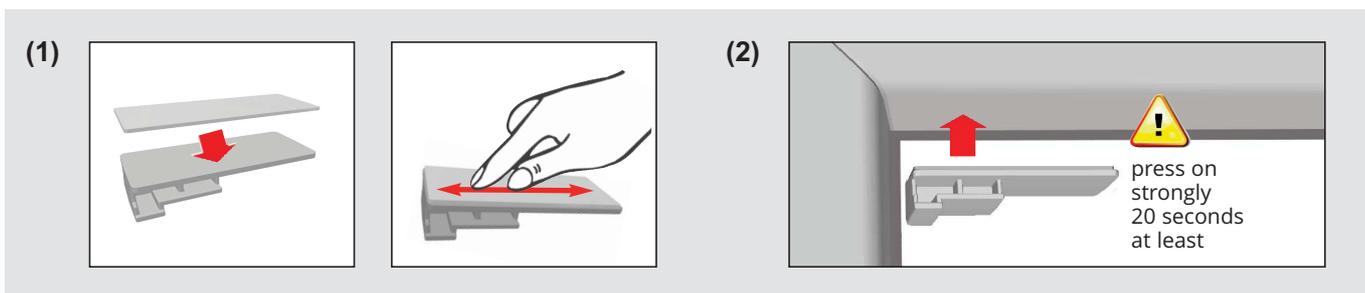

(1) The enclosed adhesive film has to be take off from the carrier film. Put it on the EOS® - glue plate (if possible do not touch the sticky side, not to reduce the adhesive force). Press strongly and rub over it several times.

(2) Remove the protective film and press the glue plate on the marked position on the window bar 20 seconds at least. Ideal temperature at 20°C, heat accelerates the adhesive process.

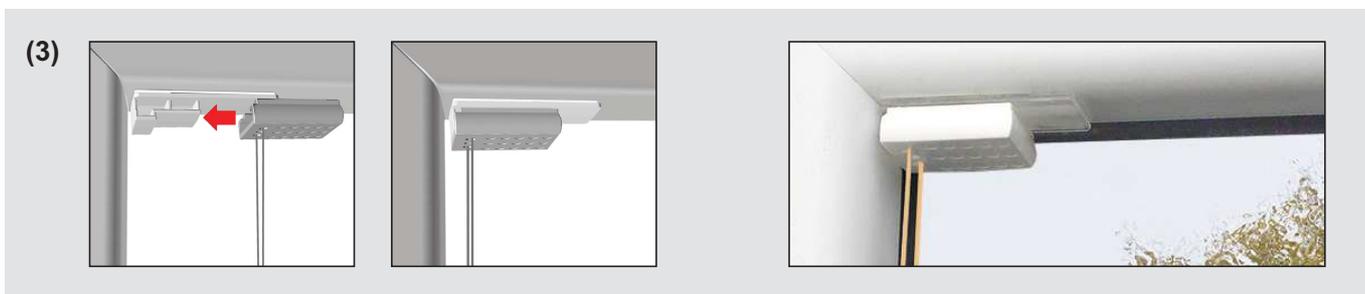

(3) Mount the EOS®- pleated blind.

glue plate for
system **Cosiflor®**
(max. size of the pleated blind 2m²)



clamping shoe Cosiflor®
new design



use article **570**


clamping shoe Cosiflor®
old design



use article **567**


| article | article-no. description | | dispatch unit |
|---------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--|--------------------------------------------------------------------------|
| | <p>570 glue plate for system Cosiflor® with clamping shoe new design self-adhesive, transparent</p> | | <p>4 pieces in a bag - 100 pieces (25 bags) in a box</p> |
| | <p>SBB 570 glue plate for system Cosiflor® with clamping shoe new design self-adhesive, transparent</p> <p>• 4 pieces self-service packed (blister) •</p> | | <p>4 pieces in a blister - 10 blisterpacks in a box</p> |
| | <p>567 glue plate for system Cosiflor® with clamping shoe old design self-adhesive, transparent</p> | | <p>4 pieces in a bag - 100 pieces (25 bags) in a box</p> |
| | <p>SBB 567 glue plate for system Cosiflor® with clamping shoe old design self-adhesive, transparent</p> <p>• 4 pieces self-service packed (blister) •</p> | | <p>4 pieces in a blister - 10 blisterpacks in a box</p> |
| | <p>561 KLE adhesive film for glue plates</p> | | <p>100 pieces</p> |
| | <p>539 cleaning tissue</p> | | <p>5 pieces in a bag - 100 pieces in a box</p> |

glue plate for
system Cosiflor®
 (max. size of the pleated blind 2m²)

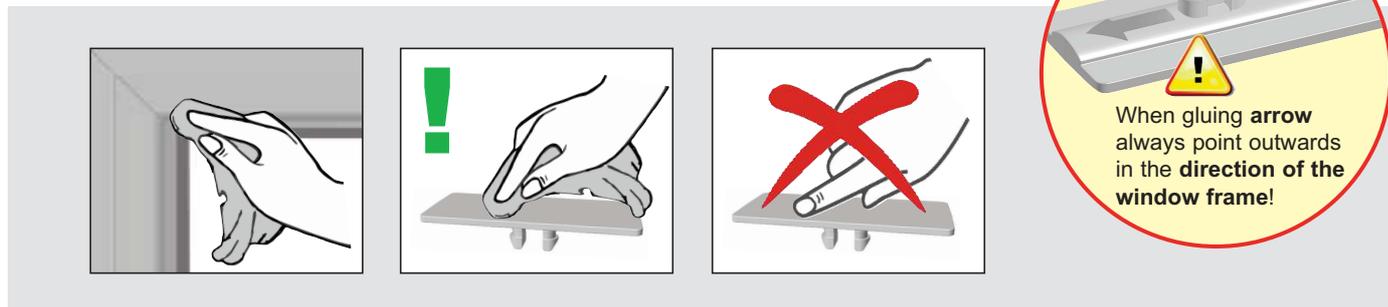

Glue plates for pleated blinds are usable for plastic and aluminium window frames which are not special coated, veined, uneven or rough (depth of the window bar at least 13 mm). When using the glue plates please

make sure that the surfaces are dry and clean. They have to be free from e.g. grease, oil or silicone films, as well as dirt particles! (After using solvents the purified surfaces have to dry for at least 2 hours.)

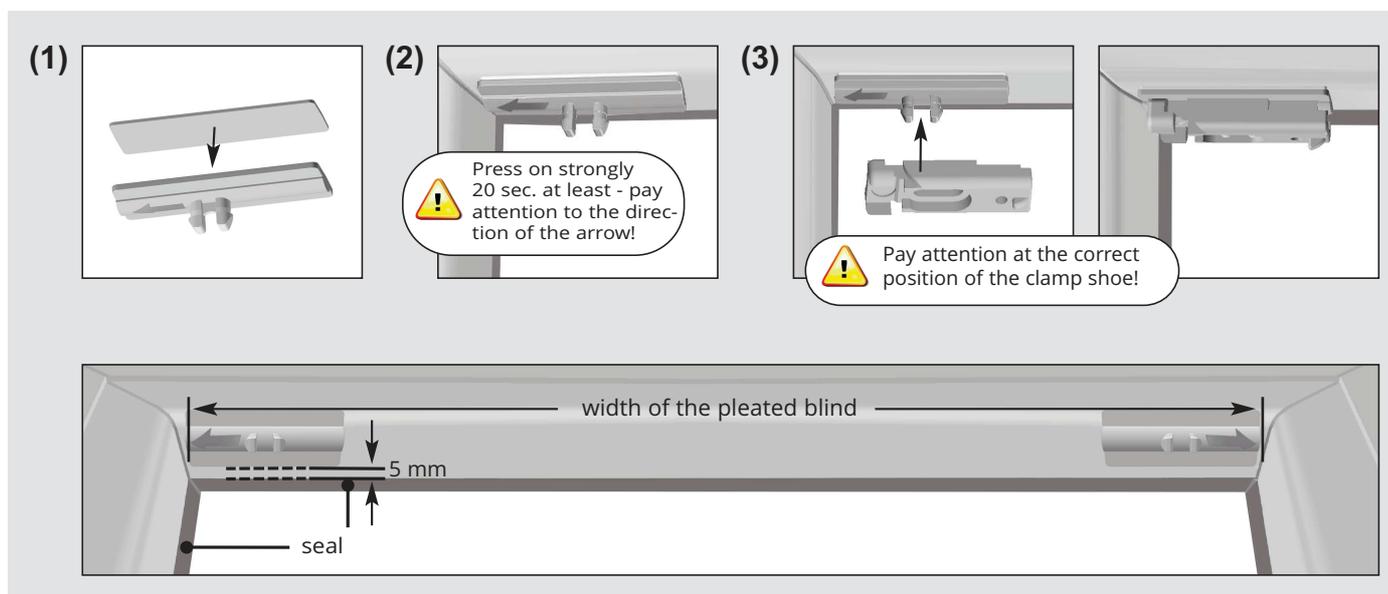

- (1) The enclosed adhesive film has to be take off from the carrier film. Put it on the glue plate. **Do not touch the sticky side, so the adhesive force is not reduced.** Press strongly and rub over it several times!
- (2) Remove the protective film and press the glue plate on the marked position on the window bar 20 seconds at least. **Make sure that the arrow on the adhesive plate points outwards to the window frame** (see illustrations). Ideal temperature at 20°C, heat accelerates the adhesive process.
- (3) Clip the base part of the Cosiflor® clamp shoe* at the glue plate. **Pay attention at the correct position!**



(4) Mount the Cosiflor® pleated blind.

*clamping shoes are delivered with the pleated blind

glue plate for
system Decomatic®
(max. size of the pleated blind 2m²)




| article | article-no. description | | dispatch unit |
|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------|--|------------------------------------------------------------------|
|  | 569 glue plate for pleated blind system Decomatic® self-adhesive transparent | | 4 pieces in a bag - 100 pieces (25 bags) in a box |
|  | SBB 569 glue plate for pleated blind system Decomatic® self-adhesive transparent • 4 pieces self-service packed (blister) • | | 4 pieces in a blister - 10 blisterpacks in a box |
|  | 561 KLE adhesive film for glue plates | | 100 pieces |
|  | 539 cleaning tissue | | 5 pieces in a bag - 100 pieces in a box |

glue plate for
system Decomatic®
 (max. size of the pleated blind 2m²)



Glue plates for pleated blinds are usable for plastic and aluminium window frames which are not special coated, veined, uneven or rough (depth of the window bar at least 13 mm). When using the glue plates please

make sure that the surfaces are dry and clean. They have to be free from e.g. grease, oil or silicone films, as well as dirt particles! (After using solvents the purified surfaces have to dry for at least 2 hours.)

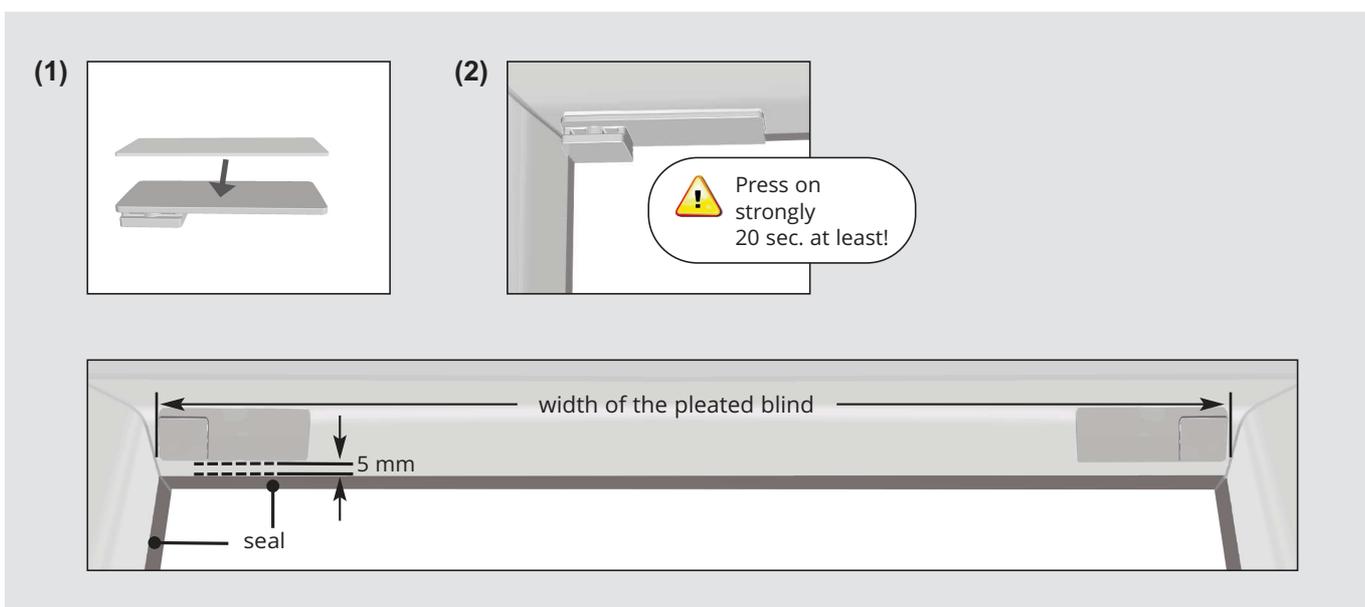

(1) The enclosed adhesive film has to be take off from the carrier film. Put it on the Decomatic® glue plate (if possible do not touch the sticky side, not to reduce the adhesive force). Press strongly and rub over it several times.

(2) Remove the protective film and press the glue plate on the marked position on the window bar 20 seconds at least. Ideal temperature at 20°C, heat accelerates the adhesive process.



(3) Mount the Decomatic® pleated blind.

universal glue plate

for system **Cosiflor®** and **Decomatic®**

(max. size of the pleated blind 2m²)




| article | article-no. description | | dispatch unit |
|-------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--|------------------------------------------------------------------|
|  | 561 UV universal glue plate for pleated blinds self-adhesive, transparent with bolts and nut for fixing the clamping shoes* | | 4 pieces in a bag - 100 pieces (25 bags) in a box |
|  | SBB 561 UV universal glue plate for pleated blinds self-adhesive, transparent • 4 pieces self-service packed (blister) • with bolts and nut for fixing the clamping shoes* | | 4 pieces in a blister - 10 blisterpacks in a box |
|  | 561 KLE adhesive film for glue plates | | 100 pieces |
|  | 539 cleaning tissue | | 5 pieces in a bag - 100 pieces in a box |

universal glue plate


for system **Cosiflor**® and **Decomatic**®

(max. size of the pleated blind 2m²)

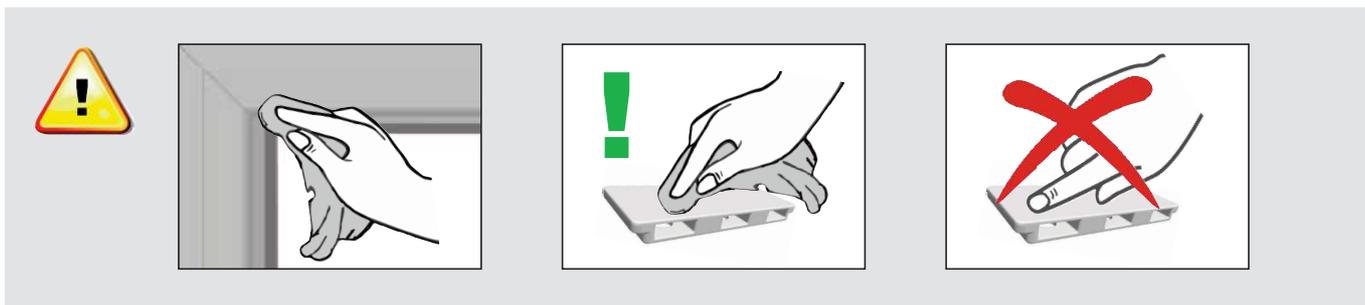

Glue plates for pleated blinds are usable for plastic and aluminium window frames which are not special coated, veined, uneven or rough (depth of the window bar at least 13 mm). When using the glue plates please



make sure that the surfaces are dry and clean. They have to be free from e.g. grease, oil or silicone films, as well as dirt particles! (After using solvents the purified surfaces have to dry for at least 2 hours.)

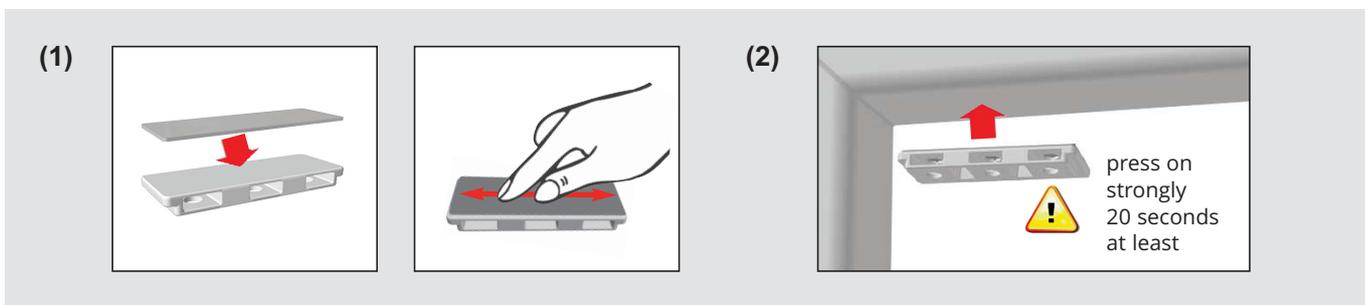



(1) The enclosed adhesive film has to be take off from the carrier film. Put it on the glue plate (if possible do not touch the sticky side, not to reduce the adhesive force). Press strongly and rub over it several times !

(2) Remove the protective film and press the glue-plate on the marked position on the window bar 20 seconds at least (hole for the screw-nut must be in the front). Ideal temperature at 20°C, heat accelerates the adhesive process.

(3a) system **COSIFLOR**®

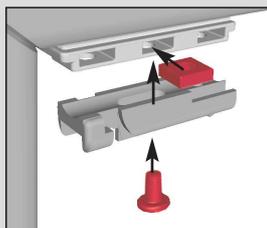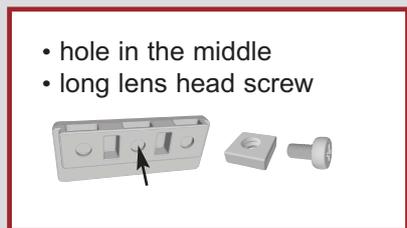


(3b) system **DECOMATIC**®

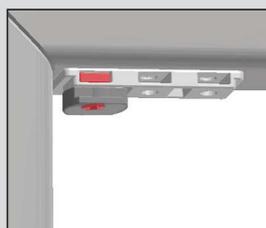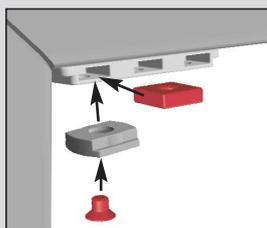

(3) Insert the nut into the glue plate and mount the clamping shoes* on the plate. Make absolutely sure that the screw is not tightened too much, because the glue-plate might be damaged!

*clamping shoes are delivered with the pleated blind

universal adhesive bracket
for system **Cosiflor®** and **Decomatic®**

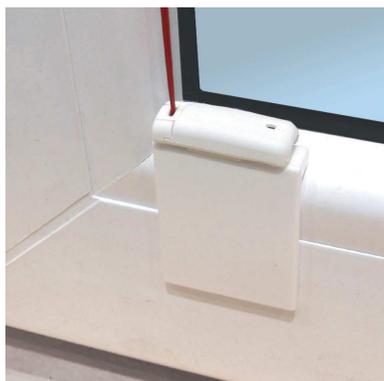




**For rounded or small
window bars
e.g. at triple glazing.**

| article | article-no. description | | dispatch unit |
|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--|-----------------------------------------------------------------|
|  | 562 adhesive bracket for pleated blinds, white, self-adhesive with bolts and nut for fixing the clamping shoes* | | 4 pieces in a bag - 20 pieces (5 bags) in a box |
|  | SBB 562 adhesive bracket for pleated blinds, white, self-adhesive • 4 pieces self-service packed (blister) • with bolts and nut for fixing the clamping shoes* | | 4 pieces in a blister - 10 blisterpacks in a box |
|  | 561 KLE adhesive film for glue plates | | 100 pieces |
|  | 539 cleaning tissue | | 5 pieces in a bag - 100 pieces in a box |

universal adhesive bracket
for system **Cosiflor®** and **Decomatic®**

Adhesive brackets for pleated blinds are usable for plastic and aluminium window frames which are not special coated, veined, uneven or rough. When using the adhesive brackets please make sure that the

surfaces are dry and clean. They have to be free from e.g. grease, oil or silicone films, as well as dirt particles! (After using solvents the purified surfaces have to dry for at least 2 hours.)

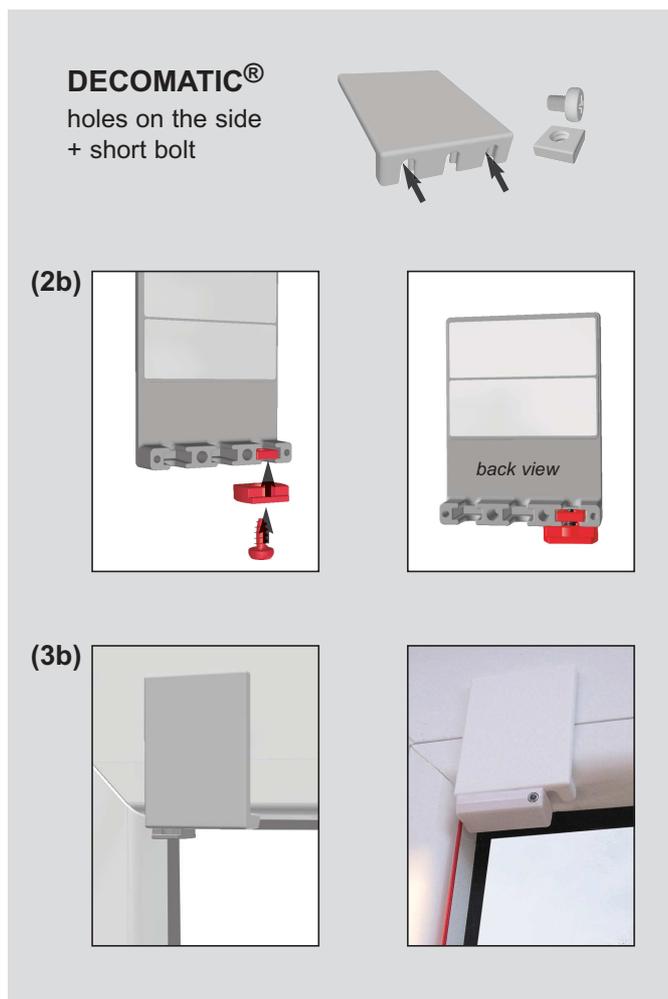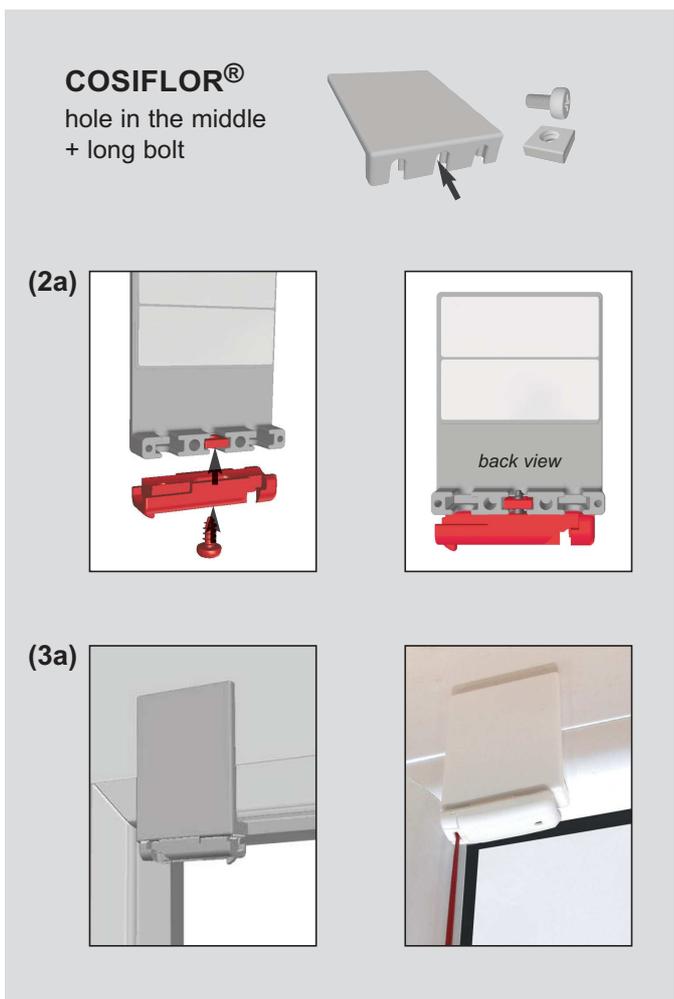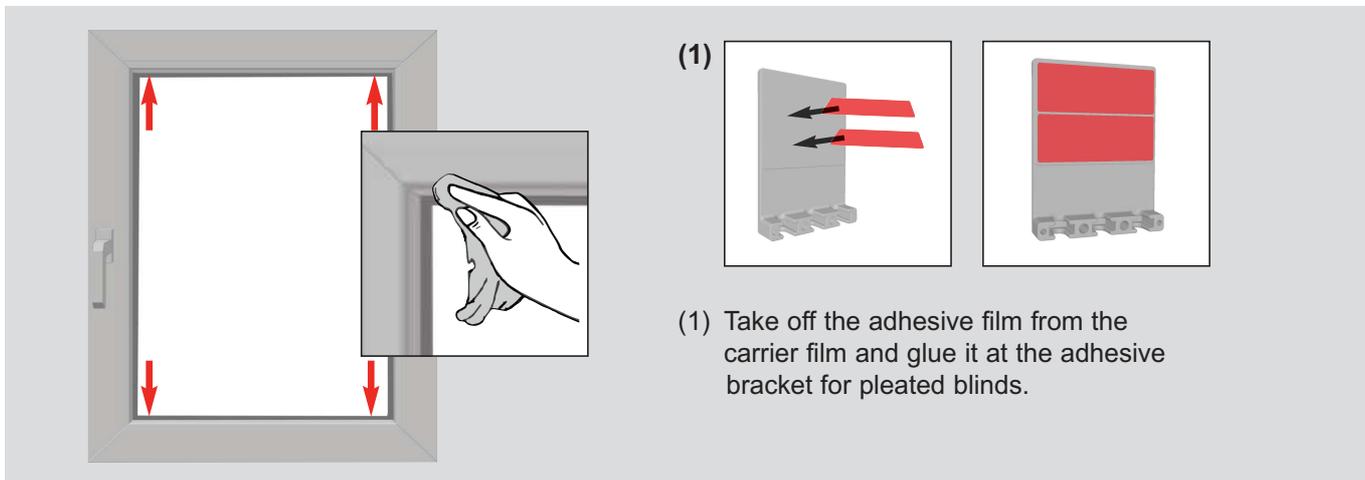

(2) Place the nut at the corresponding position. The position of the nut depends on the used pleated blind system. Then mount the base part of the clamp shoe* - note left and right ! Make sure that the screw is not tightened too much, because the bracket might be damaged!

(3) Attach the adhesive bracket at the window frame (note left and right). Press on strongly 20 seconds at least.

*clamping shoes are delivered with the pleated blind

clamp bracket
for system **Cosiflor®** and **Decomatic®**



Useable for pleated blinds
and venetian blinds.


| article | article-no. description | | dispatch unit |
|-------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--|-----------------------------------------------------------------------------|
|  | <p>566 clamp bracket for pleated blinds, white (also useable for venetian blinds)</p> <p>with bolt and nut for fixing the clamping shoes*</p> | | <p>4 pieces in a bag - 20 pieces (5 bags) in a box</p> |
|  | <p>SBB 566 clamp bracket for pleated blinds, white (also useable for venetian blinds)</p> <p>• 4 pieces self-service packed (blister) •</p> <p>with bolt and nut for fixing the clamping shoes*</p> | | <p>4 pieces in a blister - 10 blisterpacks in a box</p> |

*clamping shoes are delivered with the pleated blind


clamp bracket
for system **Cosiflor®** and **Decomatic®**

Clamp brackets are suitable for a clamp range (width of profile of the window)
from 10 mm to 25 mm.


 Don't use an electric screwdriver !

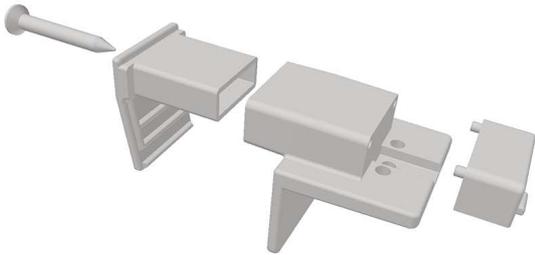

Mounting example with clamp shoe COSIFLOR®:

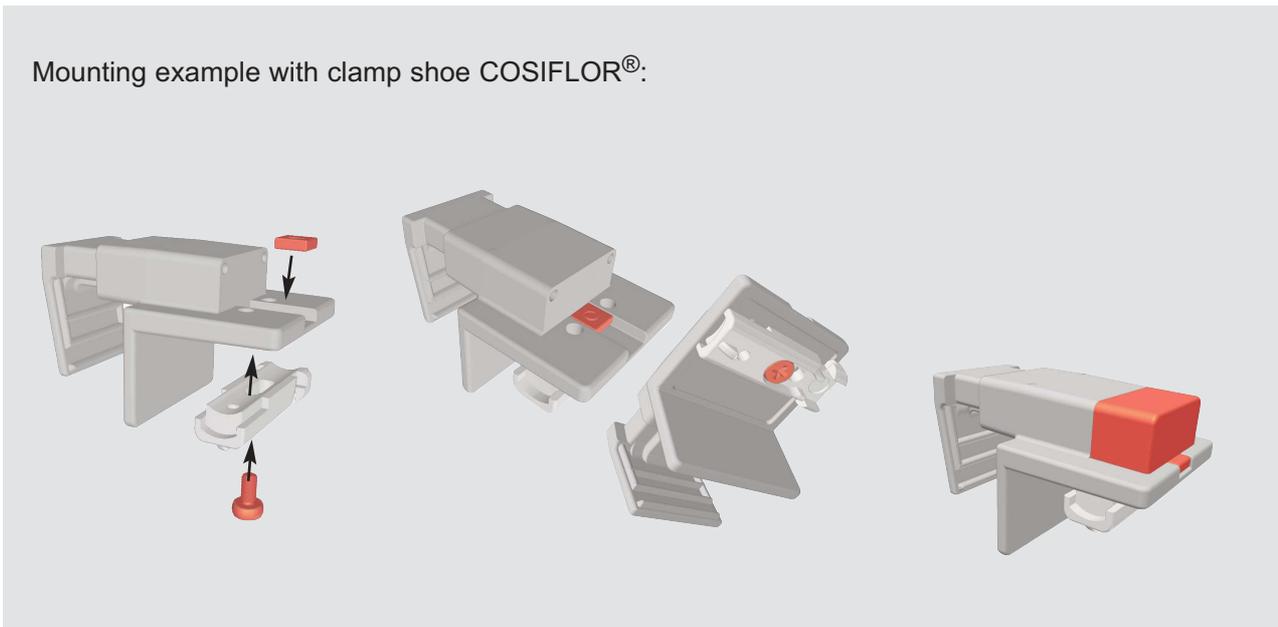

Hole in the middle for clamping shoes COSIFLOR® ,
holes on the side for clamping shoes DECOMATIC®.

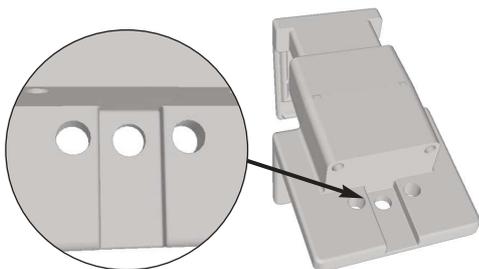

glider
for venetian and pleated blinds



to move laterally in alu-rails and
alu-rail-rods with a run of 6 mm

| article | article-no. description | | dispatch unit |
|-------------------------------------------------------------------------------------|----------------------------------------------------------------------------------|--|---------------------------------------------------------------|
|  | <p>20 GJ</p> <p>glider for venetian blinds and pleated blinds</p> | | <p>2 pieces in a bag - 20 pieces in a box</p> |

